

# **Quick Start Guide Anapaya Appliance Extreme 1130c**


**Version 1.0**

# Anapaya Appliance - Extreme 1130c

Welcome to the SCION world! This guide provides the initial connection steps to set up your Extreme 1130c device as an EDGE appliance.

## Preparation

1. Connect the power cord to the device.
2. Connect a RJ45 cable to **port 1** for Extreme hypervisor and Anapaya appliance management.
3. Connect the RJ45 cable for WAN connectivity to **port 2**.
4. Connect the RJ45 cable to LAN connectivity to **port 3**.
5. Connect a serial cable to the **Console** port.
6. Follow the **Configure an appliance** section in the latest [Self Orchestration Deployment Guide](#) from Extreme to set it up as a stand-alone UCP in self-orchestration mode.
7. After completing the setup with the **Basic Configuration Wizard**, connect to the WebUI of the UCP using your browser and the IP address assigned to **data port 1** and login with the default or your customized credentials.

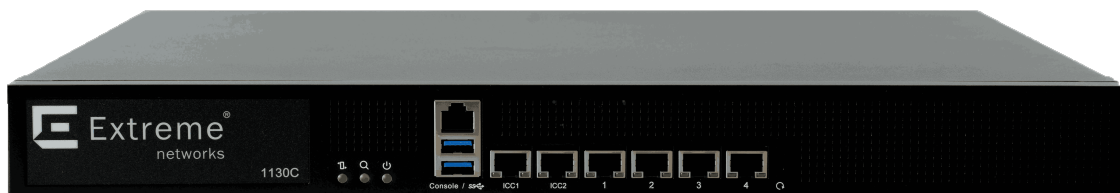

## Installation of the Anapaya appliance image

1. Download the latest Anapaya appliance Extreme VNF image tarball with the **-extreme.tar** suffix from Cloudsmith <https://docs.anapaya.net/en/latest/edge/getting-started/base-image-installation/>
2. Upload the image to the UCP device by navigating to the UCP web interface and selecting **Engines > Image Management > Choose Image file or Drag and drop image here**.
3. Install the Anapaya EDGE as an Engine Application by navigating to **Engines > Installation -> Install**
4. Under **Anapaya EDGE appliance** select **AnapayaEDGE #1** and deploy with the default settings.
5. After a few minutes, the installation should be completed, and you can log into the Anapaya EDGE appliance via serial console. Navigate to **Engines > Installation -> engine-image-name (blue text font)** and choose the **Console** tab.

## Initial Configuration

1. Use the default credentials, user: **anapaya** and password: **anapaya**.

2. Once logged in, you can set up the IP parameters as indicated by your support. For more information about initial configuration and IP address configuration, consult <https://docs.anapaya.net/en/latest/edge/getting-started/guide/> .

## Interface mapping

Interface Name	Port Nr. on Device	Port Usage	Port Type
	ICC1	Unused	RJ45 1G
	ICC2	Unused	RJ45 1G
enp1s0		Not Used	RJ45 1G
enp6s0	1	Hypervisor & Management	RJ45 1G
enp7s0	2	Default WAN interface	RJ45 1G
enp8s0	3	Default LAN	RJ45 1G
enp9s0	4	Unassigned	RJ45 1G

The official manual of the Extreme 1130C hardware can be found at:

<https://documentation.extremenetworks.com/Universal%20Compute%20Platform%201130C%20Installation%20Guide/GUID-B4B3C51C-E1F9-41F7-AEA5-8654CD78337F.shtml>

